



Industrial Equipments



www.fogegmbh.com



info@fogegmbh.com



FÖGE ELEKTRONIK GMBH
Presentstr. 3,
63939 Wörth am Main



+49 9372 9809477



Instruction Manual

Product: SE-PAC Series
AC Type Power Units

1. Intended Use

SE-PAC Series Antistatic AC Power Unit is designed for use in industrial areas. Purpose of the product is supplying AC HV to FÖGE AC type ionizing products.



The system must be operated within the limits specified in technical data and used according to technical specifications as well as installation instructions. The system must be used in such a way that no person are in danger or machines and other material goods are damaged in the event of malfunction or total failure of the system. Take additional precautions for safety and damage prevention in case of safety related applications.

2. Technical Information

Technical Information				
Product	SE-PAC-55-2-C	SE-PAC-55-4-C	SE-PAC-80-2-C	SE-PAC-80-4-C
Product Image				
Output Voltage	5.5kV	5.5kV	8kV	8kV
Number of Outputs	2	4	2	4
Power Supply	220VAC 50hZ			
Panel	On/off switch, power light, power connector			
Environment	50 °C maximum temperature, 70 % rH non-condensing max. Location should be dry and oil-free. IP54.			
Safety	Short circuit protection			
Standards	2014/30/EU EMC Directive			
	2014/35/EU Low Voltage Directive			

3. Dimensions / Installation


System operation assumes knowledge of the assembly instructions. The symbols used for safety is shown in section 8(Safety) of manual.

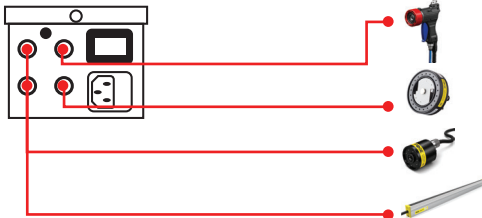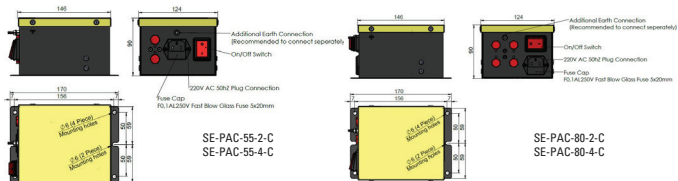

For all models, maximum length of cable and bars connected(total) can be used is 15m. If length of cables and bars exceed 15m. Power unit will not work properly and may cut the power to prevent damage.



4. Electrical Connection

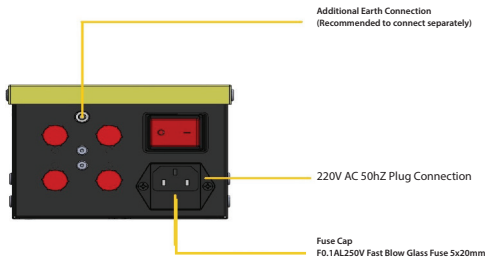

5.1. Displays/Indicators

- 220V AC

5.2. Controls

- ON/OFF Switch

6. Faults

In any of below cases or others do not open the product.  

If switch is on but the ON/OFF light is OFF, change the fuse inside the power unit. Fuse type: F0.5AL250V Fast Blow Glass Fuse 5x20mm

7. Warnings

Connect the power supply and the display/output device according to the safety regulations for electrical equipment.

The supply voltage must not exceed the specified limits.

Avoid shocks and impacts to the sensor.

Protect the cable against damage.

Possible Results of Avoidance

Risk of injury by electric shock 

Damage to or destruction of the sensor  

8. Maintenance

Because of the nature of ionisation process particles in the air sticks to the emitter pins and carbonizes. This process have a negative effect on ionisation performance.

All AC and DC ionising bars should be checked regularly and cleaned. FÖGE

Antistatic Bar Celaning Liquids and Brushes. 

9. Safety

System operation assumes knowledge of the assembly instructions. The following symbols are used in these assembly instructions:



Indicates a hazardous situation which, if not avoided, may result in minor or moderate injury.



Indicates a situation that may result in property damage if not avoided.



Indicates an electrical shock if not avoided or properly follow comments.

10. Liability for Material Defects

All components of the device have been checked and tested for functionality at the production facility. However, if defects occur despite our careful quality control, FÖGE or your dealer must be notified immediately.

The liability for material defects is 12 months from delivery.

Within this period, defective parts, except for wearing parts, will be repaired or replaced free of charge, if the device is returned to FÖGE with shipping costs prepaid. Any damage that is caused by improper handling, the use of force or by repairs or modifications by third parties is not covered by the liability for material defects. Repairs are carried out exclusively by FÖGE.

Further claims can not be made. Claims arising from the purchase contract remain unaffected. In particular, FÖGE shall not be liable for any consequential, special, indirect or incidental damage. In the interest of further development, FÖGE reserves the right to make design changes without notification.

11. Decommissioning, Disposal

Remove the power supply and output cable on the sensor.

Incorrect disposal may cause harm to the environment.

Dispose of the device, its components and accessories, as well as the packaging materials in compliance with the applicable country-specific waste treatment and disposal regulations of the region of use.