VL-DOM Dome Light

Dome light for diffuse illumination of shiny and curved parts, up to 250 mm, 24 V DC



FÖGE Elektronik GmbH · Presentstr. 3 · 63939 Wörth am Main · Germany · +49 9372 9809477 · sales@fogegmbh.com

Intended use
Technical information
Dimensions and installation
Electrical connection
Accessories
Faults
Warnings
Safety
Liability for material defects
Decommissioning and disposal

1 Intended use

The VL-DOM dome light is designed for industrial machine vision: diffuse illumination of shiny, curved and glossy parts. The part is positioned under the dome; the camera looks through the hole in the top of the dome.

The device must be operated only within the limits specified in the technical data and installed according to this manual. The system must be designed so that no person is endangered and machines and other equipment are not damaged in the event of a malfunction or total failure. Take additional precautions where the application is safety-related.

2 Technical information

Light type	Dome light for diffuse illumination
Sizes	125-98 and 250-223 (see model table)
Camera hole	Ø 40 mm
Colours and wavelength	Red 625 nm · White 6500 K
Infrared and UV	IR 850 nm and UV 365 nm on request
Light angle	120°
Supply voltage	24 V DC

Power consumption	6 – 16 W depending on size and colour (see model table)
Intensity setting	DIP switch, continuous mode (100 % ON)
Trigger input	None
Connection	M8 4-pin connector (no cable, ordering code ending -24-C)
Degree of protection	IP50
Housing	Aluminium, black anodised, inside white painted
EMC	2014/30/EU — EMC Directive (EN IEC 55015:2019+A11:2020, IEC 61547:2020)

Model	Colour	Wavelength / colour temperature	Power	A	B	C	D	E
VL-DOM-125-98-R-24-C	Red	625 nm	6 W	125 mm	98 mm	100 mm	170 mm	68 mm
VL-DOM-125-98-W-24-C	White	6500 K	8 W	125 mm	98 mm	100 mm	170 mm	68 mm
VL-DOM-250-223-R-24-C	Red	625 nm	12 W	250 mm	223 mm	150 mm	295 mm	132 mm
VL-DOM-250-223-W-24-C	White	6500 K	16 W	250 mm	223 mm	150 mm	295 mm	132 mm

All models: 24 V DC, M8 4-pin connector, IP50, continuous mode. IR (850 nm) and UV (365 nm) versions on request. Dimensions A to E as in the dimension sketch.

3 Dimensions and installation

Operating the system requires knowledge of the assembly instructions. The signal words used are explained in the section Safety.

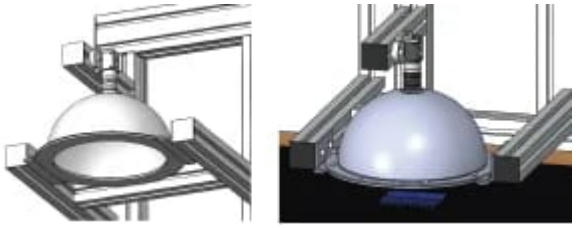

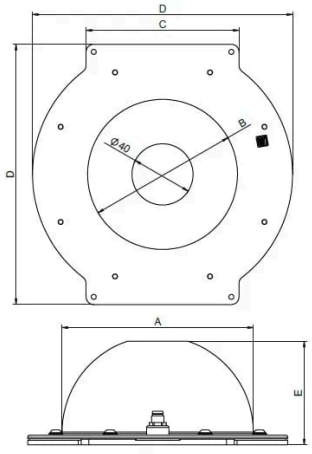

4 Electrical connection

M8 4-pin connector on the housing (no cable). Only pins 1 (+24 V DC) and 3 (GND) are used.

Pin	Function	Wire colour
1	Power in +24 V DC	Brown
2	Not connected	White
3	GND	Blue
4	Not connected	Black

The light has no trigger input; it is switched on with the 24 V DC supply.

5 Accessories

Ordering code	Description	Suitable for
TKPM-Z-5/4	M8 female connector, straight, 4-pin, PVC cable 4 × 0.25 mm², 5 m, open end, IP67	All VL-DOM models

6 Faults

- Do not open the product in any of the cases below or in any other case.
- If the LEDs do not light up, check the connection and the power supply.
- If the LEDs still do not light up, contact FÖGE or your distributor.

7 Warnings

- Connect the power supply and the display/output device according to the safety regulations for electrical equipment.
- The supply voltage must not exceed the specified limits.
- Avoid shocks and impacts to the device.
- Protect the cable against damage.

Possible consequences of non-observance: risk of injury by electric shock; damage to or destruction of the device.

8 Safety

Operating the system requires knowledge of the assembly instructions. The following signal words are used in these instructions:

Signal word	Meaning
WARNING	Indicates a hazardous situation which, if not avoided, could result in death or serious injury.
NOTICE	Indicates a situation that may result in property damage if not avoided.
ELECTRIC SHOCK	Indicates a risk of electric shock if the instructions are not followed.

9 Liability for material defects

All components of the device have been checked and tested for functionality at the production facility. If defects occur despite our careful quality control, FÖGE or your dealer must be notified immediately.

The liability for material defects is 12 months from delivery. Within this period, defective parts, except wearing parts, are repaired or replaced free of charge if the device is returned to FÖGE with shipping costs prepaid. Damage caused by improper handling, the use of force, or repairs or modifications by third parties is not covered. Repairs are carried out exclusively by FÖGE.

Further claims cannot be made. Claims arising from the purchase contract remain unaffected. In particular, FÖGE shall not be liable for any consequential, special, indirect or incidental damage. In the interest of further development, FÖGE reserves the right to make design changes without notice.

10 Decommissioning and disposal

Disconnect the power supply and the output cable from the device.

Incorrect disposal may harm the environment. Dispose of the device, its components and accessories, and the packaging materials in compliance with the waste treatment and disposal regulations applicable in the country and region of use.